

MULTI-BRAND REMOTE CONTROLS Programming Instructions for Allegro MBC4030/MBC4035 and Zenith MBC4430/MBC4435

INTRODUCTION

This multi-brand remote control operates the common features of most, but not all, models and brands of IR (infrared) controlled video and audio equipment.

The remote may provide functions that are not available on your equipment, for example, menu operations. Some functions of

your particular equipment may not be controlled by this remote. In such cases, use the original remote control for your equipment.

PROGRAMMING YOUR REMOTE (Also see Quick Program Guide on page 2)

If you are using Zenith products, the remote is programmed for the most commonly used codes. For other brands, or if your remote fails to control your Zenith products, you will have to program the remote.

Follow these steps for each product you are using:

1. Locate the three-digit codes for your brand (such as Zenith) and type of equipment (such as VCR) in the code table provided on page 4.
2. Press and hold **PRG** key with a small blunt object until the red light turns on (about three seconds). See page 3.

3. Press **TV, VCR, CABLE, AUX**, to select the product you want your remote to control. (AUX+1, AUX+2 and AUX+3 modes are also available, see Special Features.) Use **CABLE** or **AUX**, to program your remote for a second TV or VCR. Use **AUX**, to program your remote for a video disc player or audio equipment.
4. Enter the three-digit code for your equipment, then press **ENTER**. The red light should flash once, then turn off to indicate that the code was accepted. If the red light stays on, repeat steps 3 and 4 or try using a different code.

5. To test your remote for proper operation, press **POWER** — the equipment should turn on.

To erase all code programming and return to the factory preset codes, key in code **911** when programming the remote.

NOTES:

- If no key on your remote is pressed within 60 seconds, you will have to start again.
- You may cancel programming at any time by pressing **PRG**.

AUTO FIND OPTION (Additional Programming Method)

If you have tried all the codes listed for your brand and type of product in the code table on page 4 first, and none of those codes operate your equipment, you can use Auto Find to search for the code you need.

Follow these steps for each product you want to program:

1. Turn the product ON and point the remote toward it.
2. Press and hold **PRG** with a small blunt object until the LED (red light) turns on, about three seconds.
3. Press the mode key on the remote for the product you want to control:

TV, VCR, CABLE, AUX,+1,2,3.

4. Enter "0-0-0", then press **ENTER** within two seconds. When the red light flashes three times and remains lit, Auto Find is active.
5. Press and hold **POWER**, then release it, repeating this action about once a second until the equipment turns OFF. (May require up to 300 presses.)
6. Press **ENTER** immediately to save the code. The red light will flash to indicate code has been stored. If your remote fails to operate the functions you use most often, you can

re-enter Auto Find and search for a better code.

NOTES:

- The red light should go OFF when you press **POWER** and back ON when you release it. If the red light stays on as you press **POWER**, Auto Find has tried all available codes. If you finish Auto Find and the product you want to control has not turned off, your remote cannot control that product.
- Pressing **PRG** at any time during the use of Auto Find will cancel Auto Find, and you will have to start again.

SPECIAL FEATURES (Additional Programming Options)

AUX+1, AUX+2 and AUX+3 Capability

Your remote can control up to seven electronic components. If you have programmed the remote for four components using the **TV, VCR, CABLE** and **AUX** keys, you can program it for up to three additional components (**AUX+1, AUX+2, AUX+3**). Instead of Step 3 in the Programming Your Remote instructions above, press and **HOLD** down the **AUX** key and either the **1, 2** or **3** key at the same time, continue with the other steps in Programming. Once programmed, **press and HOLD** down the **AUX** key and **1, 2** or **3** at the same, to access the additional **AUX+1, 2** or **3** mode.

Cable/Converter

Volume/Mute Override (Code 399)

You may use your remote to control cable/converter volume and muting if available on your equipment. First program your remote with the brand code for your cable device using the **CABLE** or **AUX** key. Then repeat the programming steps, again using the **CABLE** or **AUX** key, **but enter code "3-9-9"** instead of a brand code.

To restore TV volume/mute to the **CABLE** or **AUX** mode, simply re-program the brand code for your cable device into that mode.

Amplifier

Volume/Mute Override (Code 499)

You may use your remote to override your TV, VCR or video disk player's volume functions with your amplifier's volume and muting. First, program your remote with the brand code for the equipment for which you want amplifier volume override, using the mode key for that product: **TV, VCR, CABLE, AUX, AUX+1, AUX+2** or **AUX+3**. Then, enter the brand code for your amplifier. Finally, repeat the programming steps, using the mode key for the equipment you wish to control (**TV, VCR, CABLE** or **AUX**), **but enter code "4-9-9"** instead of a brand code.

To restore normal volume and muting control, simply reprogram the brand code into the mode that is to be restored.

NOTE: CD and tape players will automatically select amplifier volume and mute.

Special Flashback Code 799

Provides for a direct channel entry flashback feature to mode/equipment not having this feature. Press desired mode key. Hold

down **PRG** until the red light turns on (three seconds). Key-in code "7-9-9," then press **ENTER**. Use the numbered keys and **ENTER** (if necessary) to select channels. Select at least two channels using the direct channel entry method to activate the Special Flashback feature.

Once programmed, if you choose at least two channels using the numbered keys and press **FLASHBACK**, the remote will re-

turn to previous channel selected for viewing, (Last Channel Recall).


NOTES: Special Flashback does not work for numbers over 99 on equipment that has a 100+ key. To erase Special Flashback, reprogram the brand code into the mode that is to be restored. When using Special Flashback 799, keep pointing remote at equipment until channel changes.

QUICK PROGRAM GUIDE																																																																												
STEP-BY-STEP INSTRUCTIONS	RESPONSE ON REMOTE																																																																											
Press PRG until LED (red light) turns on.	Red light stays on.																																																																											
Press mode key to be programmed. CABLE VCR AUX TV	Red light blinks.																																																																											
Enter 3-digit code from code list on page 4. <div style="display: flex; justify-content: center; align-items: center;"> <table border="1" style="border-collapse: collapse; text-align: center; margin-right: 10px;"> <tr><td>1</td><td>2</td><td>3</td></tr> <tr><td>4</td><td>5</td><td>6</td></tr> <tr><td>7</td><td>8</td><td>9</td></tr> <tr><td>0</td><td></td><td></td></tr> </table> <table border="1" style="border-collapse: collapse; text-align: center; margin-right: 10px;"> <tr><td>TVS</td><td>VCRS</td><td>CABLE</td></tr> <tr><td>1</td><td>1</td><td>1</td></tr> <tr><td>2</td><td>2</td><td>2</td></tr> <tr><td>3</td><td>3</td><td>3</td></tr> <tr><td>4</td><td>4</td><td>4</td></tr> <tr><td>5</td><td>5</td><td>5</td></tr> <tr><td>6</td><td>6</td><td>6</td></tr> <tr><td>7</td><td>7</td><td>7</td></tr> <tr><td>8</td><td>8</td><td>8</td></tr> <tr><td>9</td><td>9</td><td>9</td></tr> <tr><td>0</td><td></td><td></td></tr> </table> <table border="1" style="border-collapse: collapse; text-align: center;"> <tr><td>1</td><td>1</td><td>1</td></tr> <tr><td>2</td><td>2</td><td>2</td></tr> <tr><td>3</td><td>3</td><td>3</td></tr> <tr><td>4</td><td>4</td><td>4</td></tr> <tr><td>5</td><td>5</td><td>5</td></tr> <tr><td>6</td><td>6</td><td>6</td></tr> <tr><td>7</td><td>7</td><td>7</td></tr> <tr><td>8</td><td>8</td><td>8</td></tr> <tr><td>9</td><td>9</td><td>9</td></tr> <tr><td>0</td><td></td><td></td></tr> </table> </div>	1	2	3	4	5	6	7	8	9	0			TVS	VCRS	CABLE	1	1	1	2	2	2	3	3	3	4	4	4	5	5	5	6	6	6	7	7	7	8	8	8	9	9	9	0			1	1	1	2	2	2	3	3	3	4	4	4	5	5	5	6	6	6	7	7	7	8	8	8	9	9	9	0			Red light blinks for each button pressed.
1	2	3																																																																										
4	5	6																																																																										
7	8	9																																																																										
0																																																																												
TVS	VCRS	CABLE																																																																										
1	1	1																																																																										
2	2	2																																																																										
3	3	3																																																																										
4	4	4																																																																										
5	5	5																																																																										
6	6	6																																																																										
7	7	7																																																																										
8	8	8																																																																										
9	9	9																																																																										
0																																																																												
1	1	1																																																																										
2	2	2																																																																										
3	3	3																																																																										
4	4	4																																																																										
5	5	5																																																																										
6	6	6																																																																										
7	7	7																																																																										
8	8	8																																																																										
9	9	9																																																																										
0																																																																												
Press ENTER .	Red light blinks 3 times and turns off.																																																																											
Remote is now programmed – TEST WITH YOUR EQUIPMENT																																																																												
REPEAT ABOVE TO PROGRAM ADDITIONAL EQUIPMENT																																																																												

GUIA DE PROGRAMACION RAPIDA	
INSTRUCCIONES PASO A PASO	RESPUESTA DEL CONTROL REMOTO
Oprima (PRG) hasta que se encienda el LED (luz roja).	La luz roja permanece encendida.
Oprima el botón de modo que desea programar. (CABLE VCR) (AUX TV)	La luz roja parpadea.
Ingrese el código de 3 dígitos de la lista de códigos incluida en la página 4.	La luz roja parpadea cada vez que se oprime un botón.
Oprima (ENTER).	La luz roja parpadea 3 veces y se apaga.
El control remoto ya está programado—PRUEBELO CON SU EQUIPO	
REPITA LOS PASOS ANTERIORES PARA PROGRAMAR OTROS EQUIPOS	

INSTALLING BATTERIES

When you install or replace batteries, you may need to reprogram the remote with the brand codes for the equipment you want to control, unless the equipment responds to the factory preset codes, which are the most commonly used codes for Zenith products: 101 for TV, 201 for VCR, 353 for CABLE, 401 for AUX. **NOTE:** Zenith is not responsible for damage caused by battery leakage.

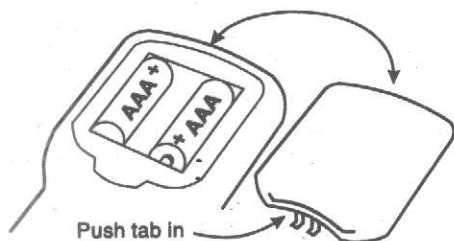

LIMITED WARRANTY

If this product should prove defective in workmanship or material and is returned to the selling dealer within 90 (ninety) days from the date of original purchase at retail, it will be repaired or replaced, at Zenith's option, without charge. **DAMAGE CAUSED BY ACCIDENT, MISUSE, ABUSE OR NEGLIGENCE IS NOT COVERED BY THIS WARRANTY.**

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

If you have any problem in obtaining satisfactory warranty performance, write to: Customer Service Department, Zenith Electronics Corporation, 1000 Milwaukee Avenue, Glenview, Illinois 60025-2493 or call (847) 391-8752, Monday through Friday, 8:00 a.m. to 4:30 p.m. Central Time.

WARNING

This equipment generates and uses radio frequency energy. If not used properly, it may cause interference to radio and TV signals. It has been type tested and found to comply with the FCC limits for a Class B computing device, which require reasonable protection against such interference.

However, there is no guarantee that interference will not occur. If this equipment does cause interference to radio or TV reception, try the following:

- Reorient the receiving antenna.
- Move the remote control further away from the receiver.

If necessary, consult your dealer or an experienced radio/television technician for additional suggestions.

Changes or modifications to this transmitter may void the user's authority under FCC rules to operate this unit.

REMOTE CONTROLS MBC4030/MBC4035/MBC4430

OPERATIONS

To operate your equipment, select proper mode by pressing TV, VCR, CABLE, AUX, (AUX+1, AUX+2 or AUX+3) on

the remote. Now press the function you need. For example, press CHAN (Up Arrow) to change channels.

Some keys might have different names,

for example, Flashback may be called Recall or Enter may be called Display. These differences depend on the brand and model of your equipment.

Note: Install batteries in back of remote. Press any key, LED (red light) should light— indicating remote is working.

PRG (Program)

Use to begin programming procedure.

FLASHBK (Flashback)

Return to the previous channel selected for viewing. (Last Channel Recall.)

CHANNEL (Up Arrow)

Tunes to the next higher channel. Press and hold to repeat.

A (Special Functions)

Displays the closed caption (CaptionVision) menu available with some televisions.

VOLUME (Left Arrow)

Decreases the TV's sound level.

NUMBER KEY PAD

Key-in numbers for direct channel tuning.

MENU

Displays menus for options. Press repeatedly to view other menus.

LEFT and RIGHT ARROW KEYS

Used to respond when an on-screen menu needs an ADJUST response. Press either key to sequence through available choices.

B, C, D, E (Special Functions)

Special functions on some equipment. Experiment to see if special features on your equipment that are not listed on the remote can be accessed by B, C, D or E keys. For example, TV Picture-in-Picture functions.


TIMER

Displays the SLEEP TIMER menu, if available. Press repeatedly to set desired TV shut-off time. Also toggles between AM and PM while performing timer functions.

NOTE:

- If your remote has Night Vision™ glow-in-the-dark keys, it must be exposed to bright light before the keys will glow in the dark. Longer exposure— longer glow.

Point Remote at Equipment

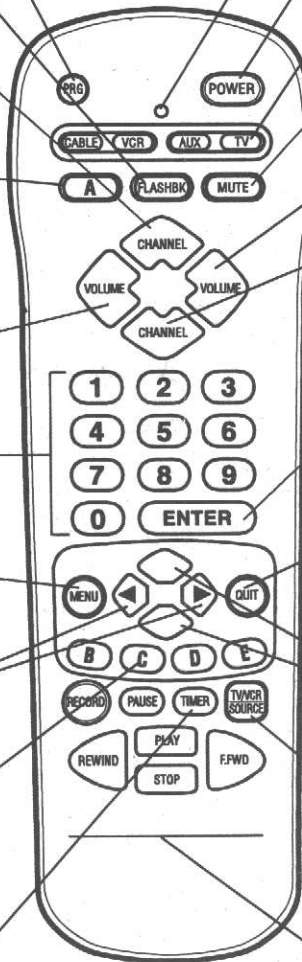

LED (Red Light)

Will light, to indicate remote is working, when a key is pressed.

POWER

Turns equipment ON or OFF.

(Modes) CABLE/VCR/AUX/TV

Selects mode of operation for Remote Control.

MUTE

Turns off sound while the picture remains. Press again to restore the sound.

VOLUME (Right Arrow)

Increases the TV's sound level.

CHANNEL (Down Arrow)

Tunes to the next lower channel. Press and hold to repeat.

ENTER

Press to see the Channel/Time display. Also used to enter channel digits.

QUIT

Press to remove an on-screen menu showing on the TV or exit any menu operation.

UP and DOWN ARROW KEYS

Used to respond when an on-screen menu needs a SELECT response. Press to move the highlight bar within the menu.

TV/VCR SOURCE

Press TV/VCR SOURCE repeatedly to step through the source selections.

(VCR Function Keys)

RECORD, PLAY, STOP, REWIND, F.FWD, PAUSE

Use to control VCR. Keys dedicated to VCR functions may be used to operate your VCR while the remote is in TV mode.

Key Functions Overview

REMOTE CONTROL OPERATING CODES BY BRAND NAME

(Be sure to record your brand codes on the back of the battery compartment door, for future reference)

TV TV/VCR Combos	
Admiral	116, 121, 130, 133
Adventura TV/VCR	154
Akai	104
Amark	103, 146
AOC	104
Bell & Howell	121
Broksonic	131, 136
Candle	139
Centurion	119
Citizen	121, 139
Contec	141
Coronado	103
Crown	103
Curtis Mathes	116, 119, 121
Daewoo	149, 159
Daewoo TV/VCR	148
Daytron	119
Elektra	121
Emerson	103, 104, 123, 124, 131, 136, 145
Emerson TV/VCR	158
Fisher	109, 118
Funai TV/VCR	154
General Electric	106, 107, 114, 116, 117, 161
Goldstar	103, 104, 119, 147
Goldstar TV/VCR	153
Hitachi	102, 103, 129, 163
J.C. Penney	104, 110, 114, 117, 119
JVC	125, 132, 164
KMC	103
KTV	103, 104, 138
Kurazai	121
Lodgenet	121
Logik	121
LXI	133, 137
Magnavox	103, 112, 113, 117, 119, 127, 128, 139, 165
Magnavox TV/VCR	173
Majestic	121
Marantz	104, 120, 155
Megatron	146
Memorex	121
MGA/Mitsubishi	104, 119, 120, 130, 140, 155
Montgomery Ward	103, 104, 105, 113, 114, 119, 121, 130, 133
NEC	104, 119
Panasonic	106, 107, 160, 166
Panasonic TV/VCR	174
Philco	103, 104, 112, 113, 139

Philips	112, 113
Pioneer	135
Portland	103
ProScan	116, 157, 162, 167
Quasar	106, 107
RCA	104, 116, 126, 157, 161, 162, 167, 168
Realistic	105, 123, 124
Sampo	119
Samsung	103, 119, 134, 141
Sanyo	108, 109, 118
Scott	119, 124
Sears	103, 108, 109, 110, 111, 118, 134
Sharp	103, 105, 122, 133, 137, 156, 169
Signature 2000	103, 104, 105, 113, 114, 119, 121, 130, 133
Sony	115, 143, 151, 170
Soundesign	139
Sylvania	112, 113, 117, 119, 127, 128, 139
Symphonic TV/VCR	154
Tatung	106
Teknika	103, 112, 121, 124, 139
Telerent	103, 121
Toshiba	110, 111, 134, 171
XR1000	121
Yorx	119
Zenith	101, 149, 175
Zenith TV/VCR	153, 154, 172

VCR	
Admiral	208, 261
Adventura	231
Aiwa	231
Akai	223, 238, 241
Audio Dynamics	202, 218
Bell & Howell	206, 247
Broksonic	221, 226, 250, 255
Canon	214
Citizen	209
Craig	212
Curtis Mathes	214, 259
Daewoo	244, 246, 248, 254
Daytron	236, 246
DBX	202, 218
Emerson	203, 221, 223, 226, 233, 235, 243, 250
Fisher	211, 212, 213, 247
Funai	231
General Electric	214, 216, 220
Goldstar	209

Go Video	256, 262, 263
Hitachi	215, 257
Instant Replay	214, 227
J.C. Penney	214, 215, 218, 227
JVC	202, 225, 258
Kenwood	202
Logik	239
LXI	209, 231
Magnavox	207, 214, 231
Marantz	207, 218
Marta	209
Memorex	206, 212, 214, 231
Mitsubishi	204, 222, 252, 264
Montgomery Ward	208, 214, 216, 219, 231, 249
Multi Tech	239
NEC	202, 218
Orion	250
Panasonic	214, 251, 259
Pentax	215
Philco	207, 214
Philips	207, 214, 227
Pioneer	210, 215
Portland	246
Pro Scan	216, 260
Quasar	214, 259
RCA	215, 216, 220, 227, 240, 242, 260
Realistic	206, 208, 212, 214, 231
Samsung	220, 230
Sansui	239
Sanyo	206, 212, 247
Scott	204, 205, 233, 243
Sears	206, 209, 211, 212, 215
Sharp	208, 261
Shintom	239
Signature 2000	208, 214, 216, 219, 231, 249
Sony	217, 232, 237
Sylvania	207, 214, 227
Symphonic	231
Tashiko	209
Tatung	202
Teac	202, 231
Teknika	234
Toshiba	205, 215
XR1000	239
Vector Research	204, 218
Yamaha	202, 218
Zenith	201, 224, 225, 229, 237

CABLE/SATELLITE	
Allegro	358, 362
Allegro A/B Switch	361
Gemini	305, 331, 338
General Electric	367
General Instrument	305, 306

Hamlin	302, 303, 345, 365, 366
Jerrold	304, 307, 308, 309, 310, 318, 360, 363
Kale Vision	335
Macom	314, 321
Magnavox	334
NSC	335, 339, 368, 369, 370
Oak	311, 332, 342
Panasonic	313, 320
Paragon	333
Philips	347, 350, 352, 354, 355
Pioneer	315, 343
RCA DSS	373
Regency	329
Samsung	335
Scientific Atlanta	316, 323, 336, 364
Sprucer	313
Standard Comp	335
Stargate	379
Texscan	339, 356, 371
Tocom	317, 318, 346
Unika	348, 362
United Satellite	344
Universal	358, 362
Vid Tech	340
Video Way	349
Viewstar	354, 355, 372
Zenith	301, 353, 374
Zenith Satellite	312, 328, 330, 351, 378

VIDEO DISK PLAYERS	
Pioneer	402, 403
Sanyo	401
Sony	404
Zenith	401

AUDIO CD PLAYERS	
Akai	409, 424
Crown	410
Denon	411
Fisher	412, 438
Goldstar	460
Harman/Kardon	413
JVC	415
Kenwood	412, 416, 417, 441
Magnavox	421, 422, 433, 434
Mitsubishi	423, 424
NAD	425, 426, 447
Nakamichi	427, 428
NEC	429
Onkyo	430
Panasonic	431, 432
Philips	421, 433, 434
Pioneer	431, 435

AUDIO TAPE DECKS	
Denon	455
Harman/Kardon	456
JVC	457
Kenwood	450
Onkyo	458
Philips DCC	454
Pioneer	451, 478
Sony	452
Technics	454, 497
Yamaha	453

AUDIO TUNERS AND AMPLIFIERS	
Denon	462, 463
Fisher	464
Goldstar	460
Harman/Kardon	465
JVC	466
Kenwood	468, 469
Marantz	472, 503
Onkyo	473
Philips	475, 476
Pioneer	477, 478, 479
Radio Shack	487, 488
Realistic	480
Sanyo	481
Scott	482
Sharp	483
Sherwood	487, 488
Sony	489, 490, 491, 492
Soundesign	461, 498, 501, 502
Teac	494, 495
Technics	497
Yamaha	496
Zenith	460, 461, 498, 501, 502

Ref:
124-212-16/17
124-212-20/21
124-212-28/29 and
µP 221-952-02A

ZENITH ELECTRONICS CORPORATION
1000 MILWAUKEE AVENUE
GLENVIEW, ILLINOIS 60025

Part No. 206-2784-01
Printed in U.S.A.
Issue - EDC